
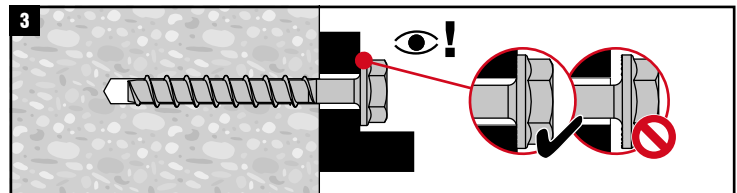


HUS-EZ SS316 3/8"	h_1^*	h_{nom1} = 2.0"	h_{nom2} = 2.5"	h_{nom3} = 3.25"
		$t_{fix1 \text{ max}}$	$t_{fix2 \text{ max}}$	$t_{fix3 \text{ max}}$
3/8" × 2-1/2"	2 3/4" - t_{fix}	1/2"	-	-
3/8" × 3"	3 1/4" - t_{fix}	1"	1/2"	-
3/8" × 4"	4 1/4" - t_{fix}	2"	1 1/2"	3/4"
3/8" × 5"	5 1/4" - t_{fix}	3"	2 1/2"	1 3/4"

2.2			
	Nuron SID 4-22	✓	✗
	Nuron SID 6-22	✓	✗
	Nuron SIW 4-22	✓	✗
	Nuron SIW 6-22	✓	✗
	CPC SID 4-A22/A18	✓	✓
	CPC SIW 6AT-A22/A18	✓	✓

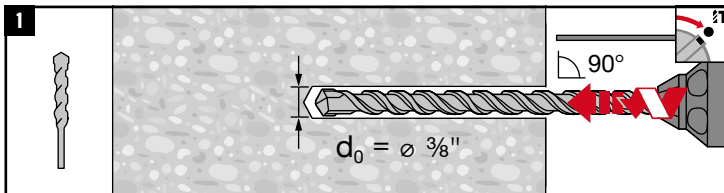

*For non-hole cleaning installation (step 1), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.